

## CONTENT



X4 Self-threading screws



X4 Metal clamps to stop elastic from coming off



X2 Elastics



X1 Accessory box



X1 Galvanized steel vat

**MAX**<sup>®</sup>

[www.maxcases.it](http://www.maxcases.it)

## INSTRUCTIONS

---

1) Placement of the elastics in the galvanized steel vat

*Place the elastics according to your needs using the pre-cut slots. Use as many slots as needed.*





2) Fix the ends of the elastic with the metal clamps

*Use pliers to tighten the clamps on to the elastics.*



### 3) Placement of the vat in the case

*The vat can be placed in three positions.*

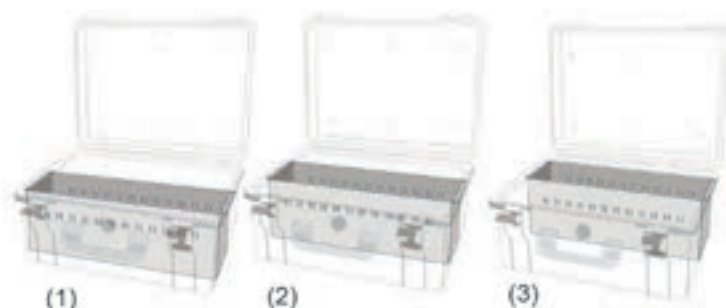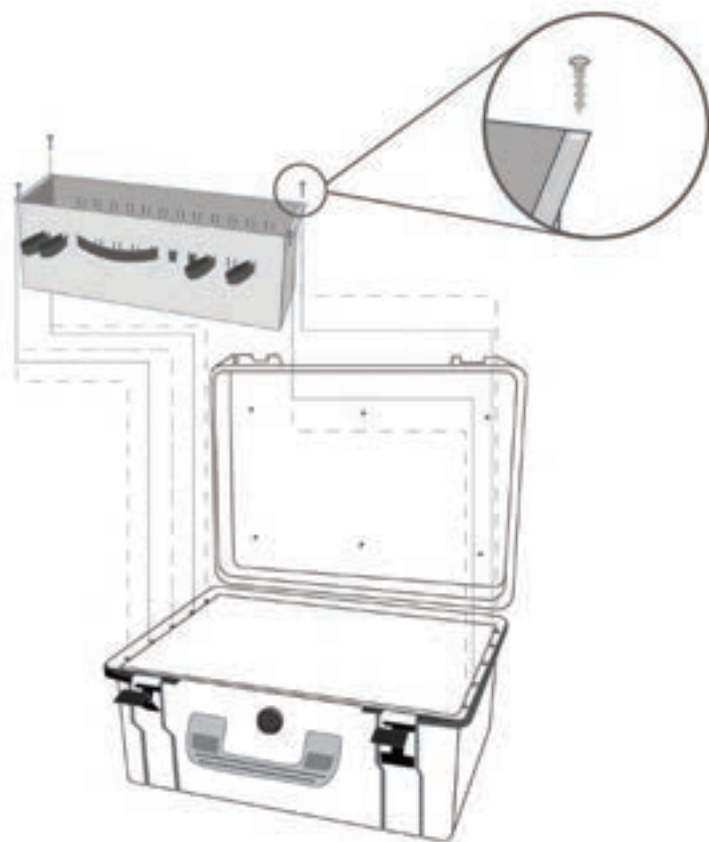

- (1) Front placement
- (2) Middle placement
- (3) Back placement

